



TechTip: Terminals with variable structure

This document describes how the terminals with variable structure are configured in Eplan. Terminals with variable structure consist of a base terminal and plug-in supplementary terminals.

Examples are Allen-Bradley 1492-LS2-3* or Weidmüller WDT 2.5.

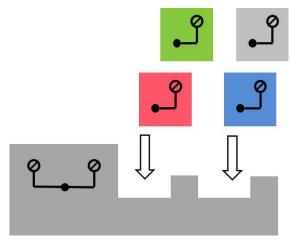


Variable terminal from multiple parts

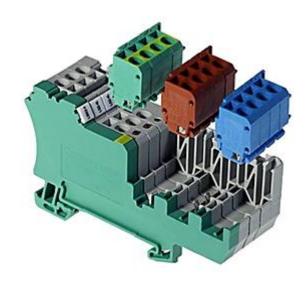

Practical example initiator terminal

Initiator terminals with variable structure consist of a base element and optional plugin potential terminals

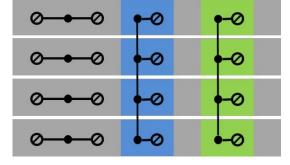

Bar of variable terminals with a total of 12 parts

4x base terminal L4x supplementary terminal N4x supplementary terminal PE



Preparation for the parts management

Tab Master data > Command group Parts > Management

Only the information that is available is entered in the parts management. For the base terminal and the supplementary terminals separate parts each with exactly one function definition are created. The **Level** field remains empty.

1. The base terminal receives exactly one function definition (Function templates tab).

Row	Function definition	 Level	
1	Terminal with saddle jumper, 2 connection		
	points		

2. The supplementary terminals receive exactly one function definition each.

Row	Function definition	 Level	
1	N terminal with saddle jumper, 1 connection point		

To prepare the supplementary terminals for the device selection, the **Part is accessory** check box is activated on the **Accessories** tab.

3. To ensure that the device selection suggests fitting supplementary terminals, assign them as accessories to the base terminal (**Accessories** tab).

Row	Required	Part number / name	Designation 1	Variant	Record type	
1		Supplementary terminal BR		1	Component	
2		Supplementary terminal BL		1	Component	
3		Supplementary terminal GR		1	Component	



Configuration - graphical editor

- Insert a symbol for the base terminal. Activate the Main terminal check box (property dialog, Terminal tab).
 The function definition must correspond to the "Terminal, general..." with the fitting number or exactly the entry in the part.
- Insert 2 symbols for the supplementary terminals. The supplementary terminals are no main terminals. The Main terminal check box (property dialog, Terminal tab) is deactivated. The function definitions must correspond to the "Terminal, general..." with the fitting number of connections or exactly the entry in the part.
- Combine the terminals in the Edit terminal strip dialog to a multi-level terminal. Tab Devices > Command group Terminals > Terminal strip The sequence determines the output in the terminal diagram.

Row	Function definition	Terminal designation	Level	Preview
1	Terminal, general, with saddle jumper, 2 connection points	1	0	0 00
2	Terminal, general, with saddle jumper, 1 connection point	1N	0	0
3	Terminal, general, with saddle jumper, 1 connection point	1PE	0	Ø 🗖

Before the combination into the multi-level terminal

After the combination into the multi-level terminal

Row	Function definition	Terminal designation	Level	Preview
1, 2, 3	Terminal, general, with saddle jumper, 2 connection points	1	3	
	Terminal, general, with saddle jumper, 1 connection point	1N	2	
	Terminal, general, with saddle jumper, 1 connection point	1PE	1	



4. In the **Edit terminal strip** dialog, select a multi-level terminal with multiple levels. Select the **Device selection** popup menu item.

Note:

Ensure that the **Level** check box is deactivated in the settings for the device selection on the **Terminal** tab. So that the part of the base terminal is offered for selection.

After selection of the part for the base terminal, the fitting parts for the supplementary terminals appear in the **Device selection** dialog in the "Accessories" area. The parts of the supplementary terminals can be added through selection. You can check the combination in the "Selected parts: Functions / templates" section.

- \Rightarrow The device selection transfers the data of the part into the schematic.
- 5. The view in the **Edit** dialog after a device selection depends on the selected part:

Row	Function definition	Terminal designation	Level	Preview
1, 2, 3	Terminal with saddle jumper, 2 connection points	1	3	
	N terminal with saddle jumper, 1 connection point	1N	2	
	PE terminal with rail contact, 1 connection point	1PE	1	

Recommendation: Save the terminals for the next usage in a macro.